
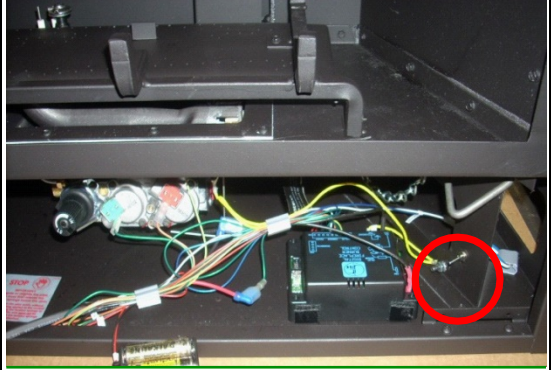







Find Your SUREFIRE® Switch!

The following chart illustrates the location of the SUREFIRE® switch on units that offer this feature:

	Surefire Switch Location	
B36XTE/B36XTCE	Center - above the valve	 <p><i>The Surefire switch is located above the valve. This can be accessed by removing the bottom louver/panel.</i></p>
B41XTE/B41XTCE	Bottom Right Corner	 <p><i>The Surefire switch is located in the left corner of the bottom louver/panel.</i></p>
P33E/P33CE/ HZ33CE	Bottom Right Corner	
P36E	Bottom Right Corner	

HZ30E	Bottom Left Corner	
HZ40E	Bottom Right Corner	
HZ42STE	Bottom Right Center	
HZ54E	Bottom Right Center (behind front wall)	<p>The Surefire switch is located at the bottom right center, behind the front wall.</p>
LRI4E/HRI4E	Bottom Left Corner	

LRI6E/HRI6E	Bottom Right Corner	
L965E/HZ965E	Bottom Right Corner	
E18E	Bottom right above DFC board	